




IZRADA ALUMINIJSKIH OGRADA I VRATA




IZRADA OGRADA

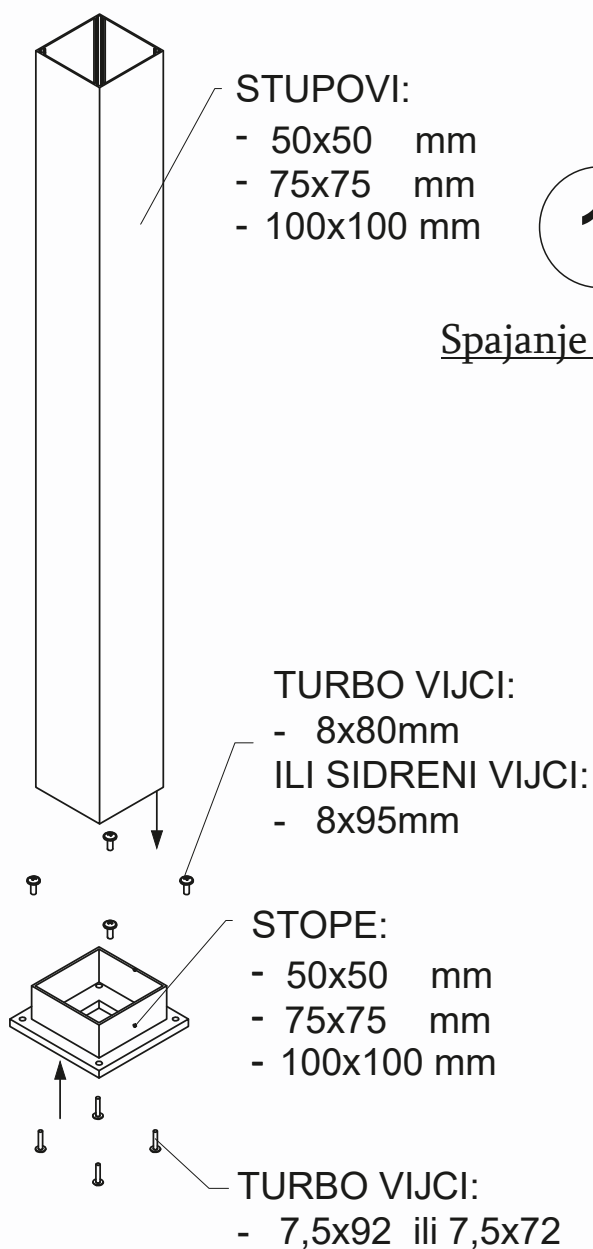

1.

Spajanje stupova i stopa

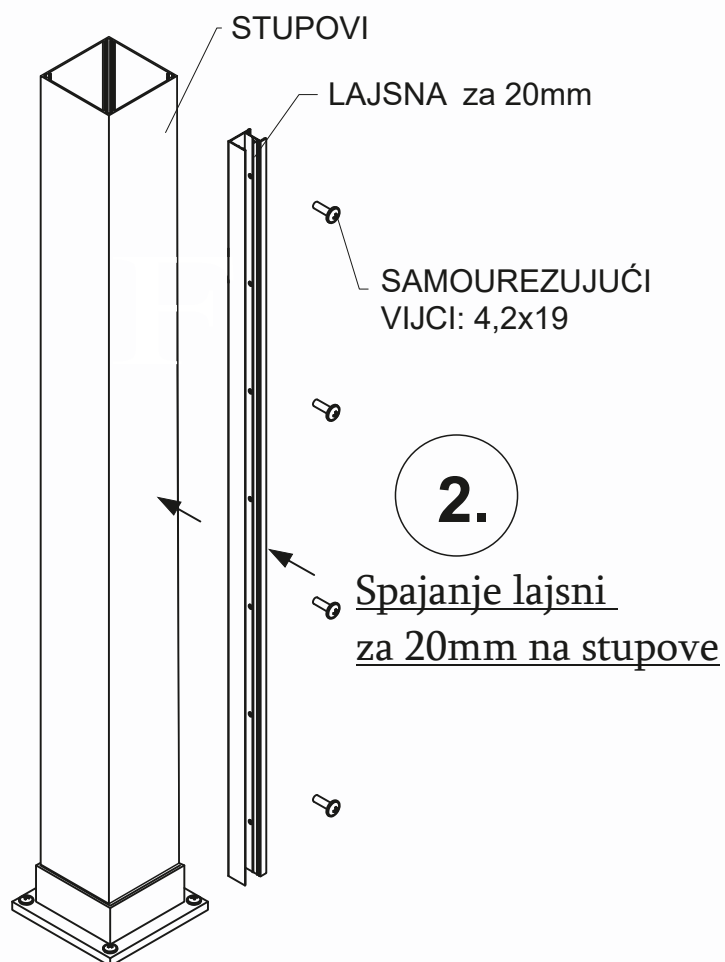

ISPUNE po želji:

- 40x20mm
- 60x20mm
- 80x20mm
- 100x20mm
- 160x20mm

STUP

LAJSNA

SAMOUREZUJUĆI
VIJCI: 4,2x19 mm

3.

Montiranje ispuna
u lajsne 20 mm

Poklopac:

- 50x50 mm
- 75x75 mm
- 100x100 mm

ČEP za lajsnu

4.

Stavljanje poklopaca na lajsne
i odgovarajućih čepova na
stupove

poklopac za lajsnu 20 mm
za lajsnu 20 m

IZRADA OGRADA SA ISPUNAMA POD KUTEM

Poklopac :

- 50x50 mm
- 75x75 mm
- 100x100 mm

Stupovi:

- 50x50 mm
- 75x75 mm
- 100x100 mm

TURBO VIJCI:

- 8x80mm

ILI SIDRENI VIJCI:

- 8x95mm

TURBO VIJCI:



- 7,5x92 ili 7,5x72

STOPE:

- 50x50 mm
- 75x75 mm
- 100x100 mm

1.

Spajanje stupova i stopa

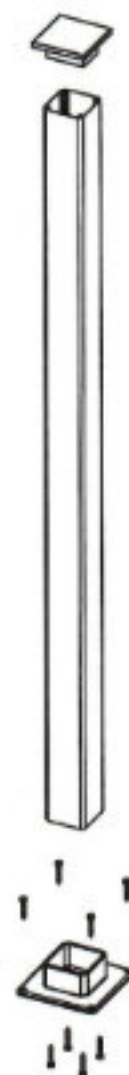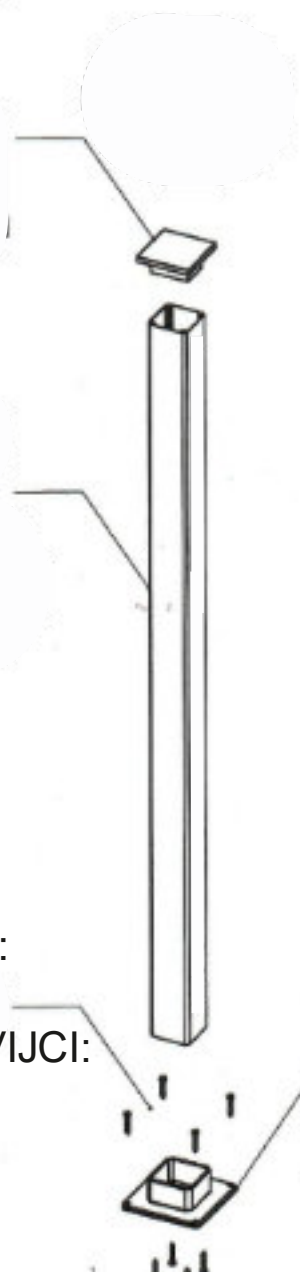

H - profil za ispunu 100x20

Ispune 100x20 pod kutom

Spojnica za 100x20 crna loft

2.

Montiranje spojnica na
ispune 100x20,
zatim ispunje na H-profil

STOPE:

- 50x50 mm
- 75x75 mm
- 100x100 mm


STUPOVI:



- 50x50 mm
- 75x75 mm
- 100x100 mm

3.

Montiranje stupa na H - profil

IZRADA KRILNIH VRATA

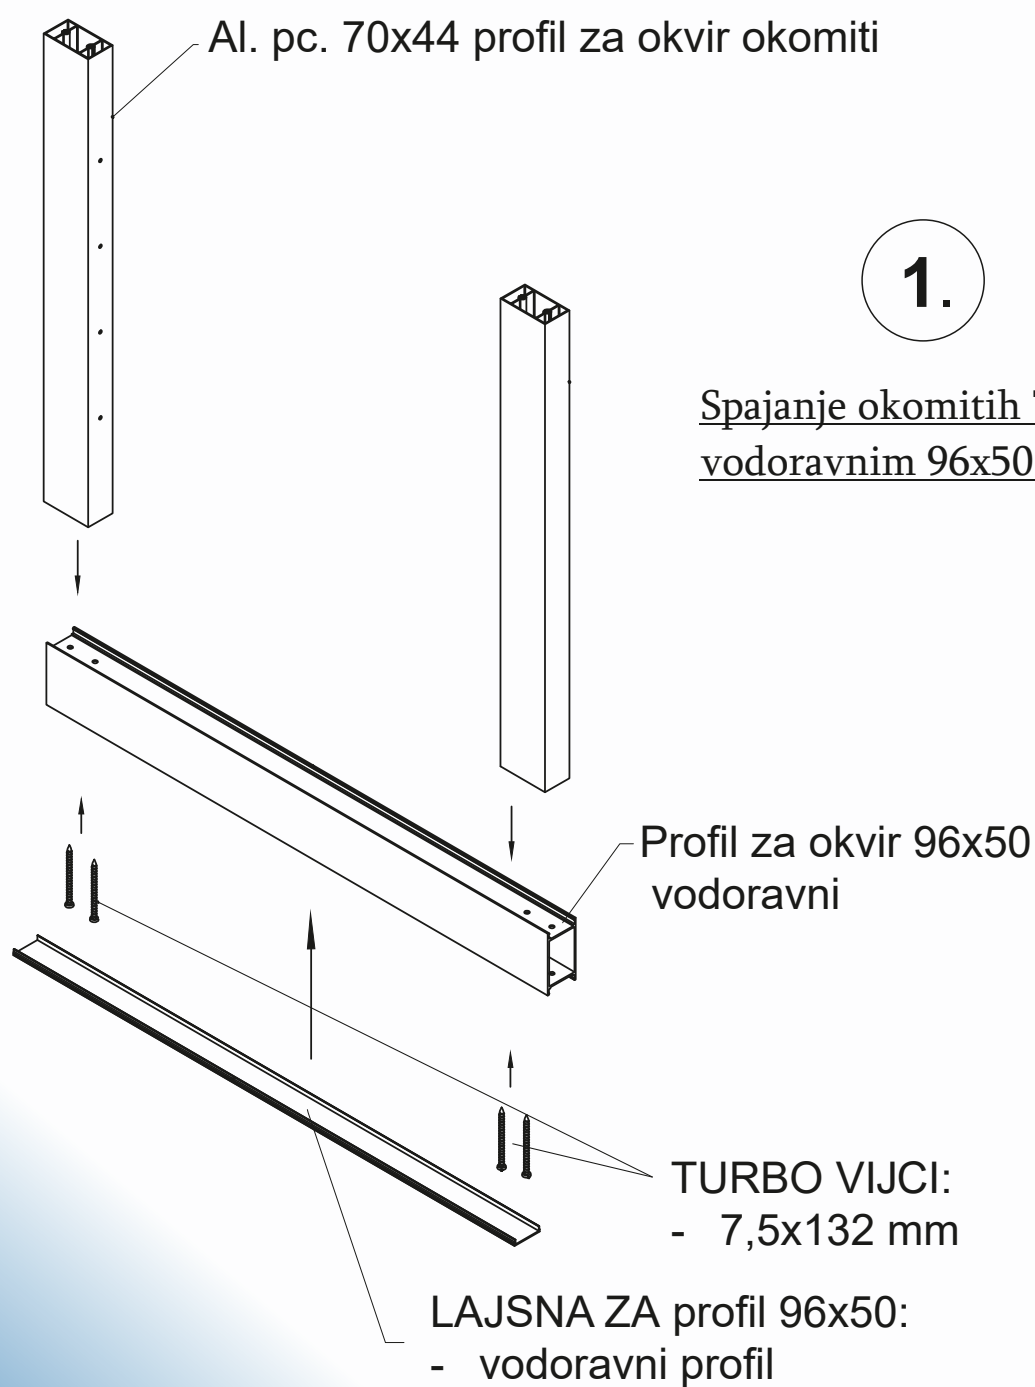

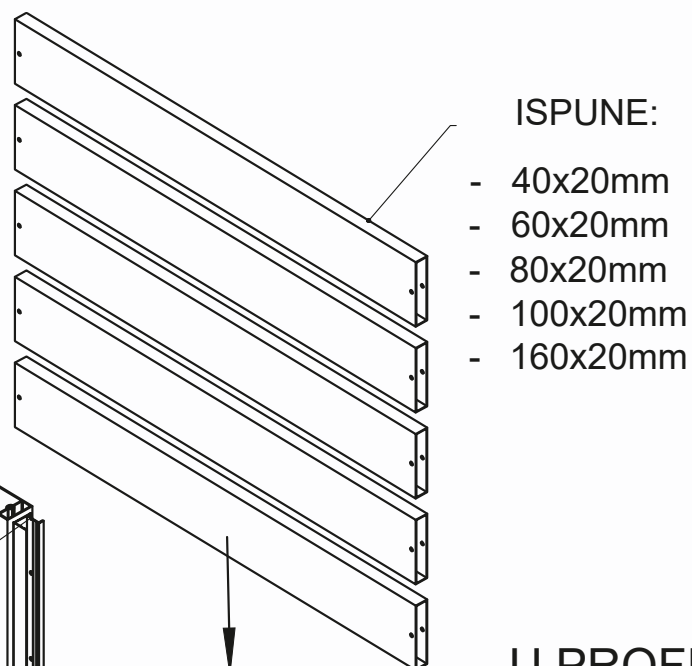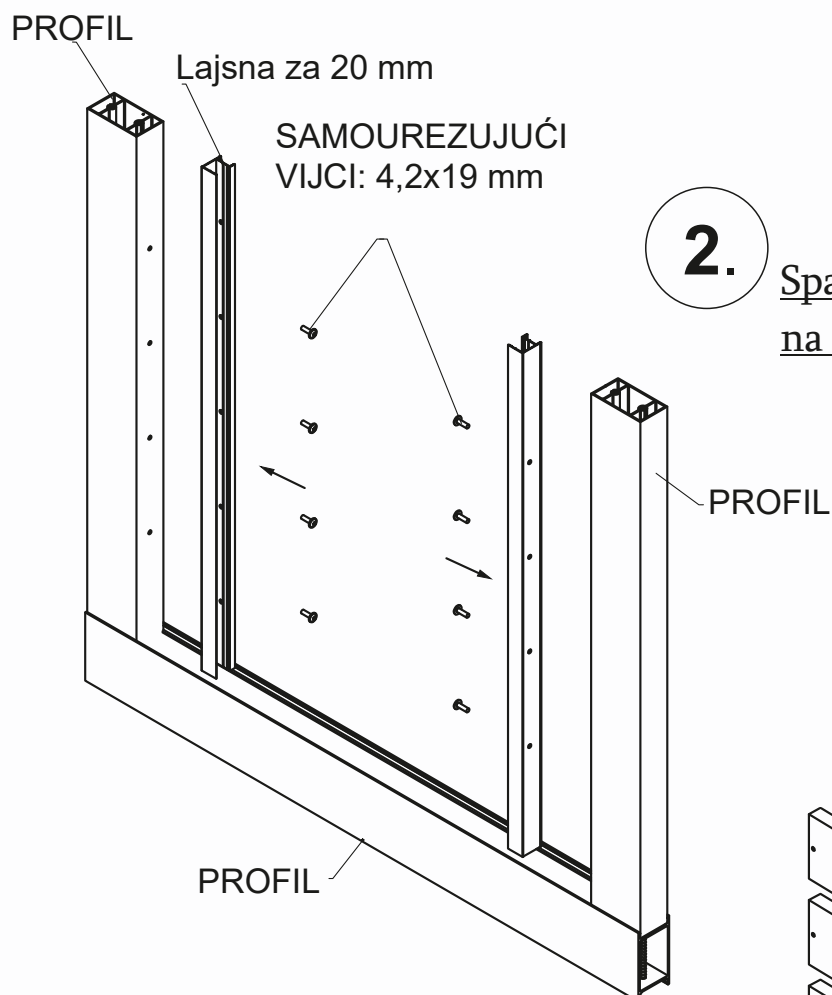


3.


Montiranje ispuna po želji
u lajsne 20mm

4.

Spajanje ispuna i
stavljanje poklopca 20 mm

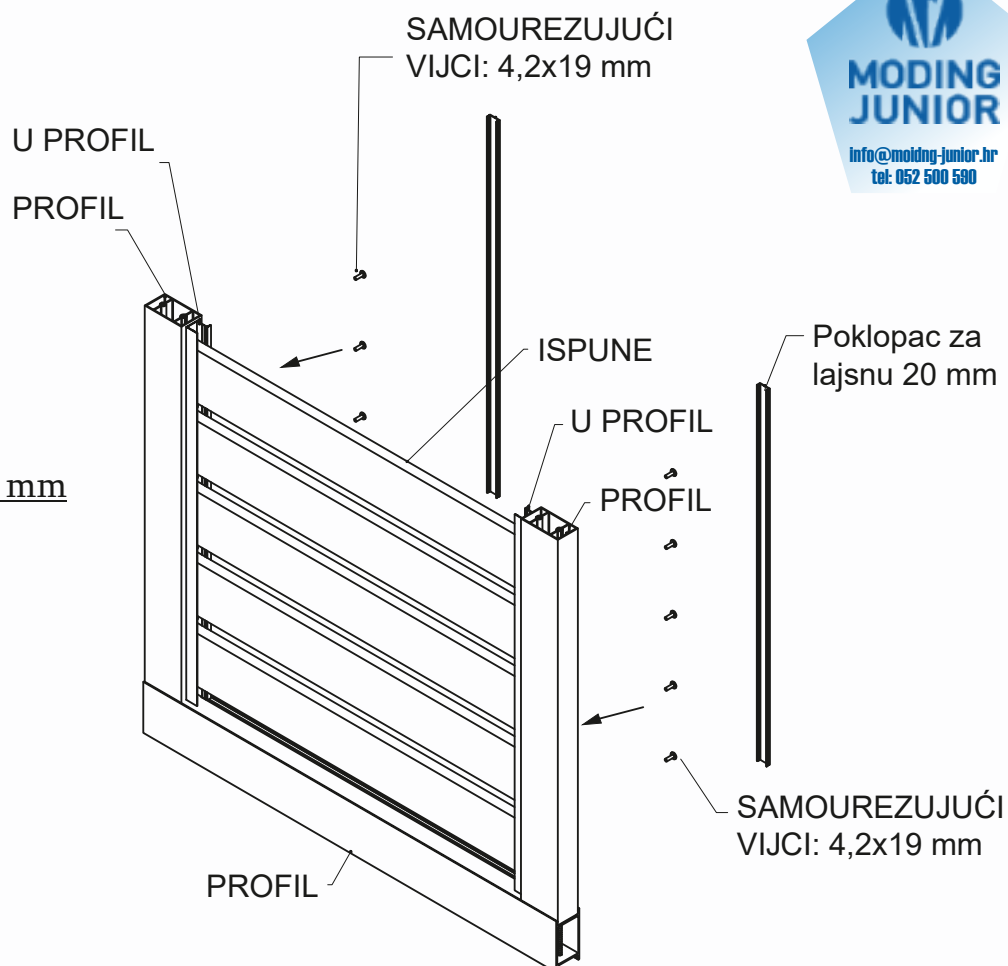

TURBO VIJCI:
- 7,5x132, mm

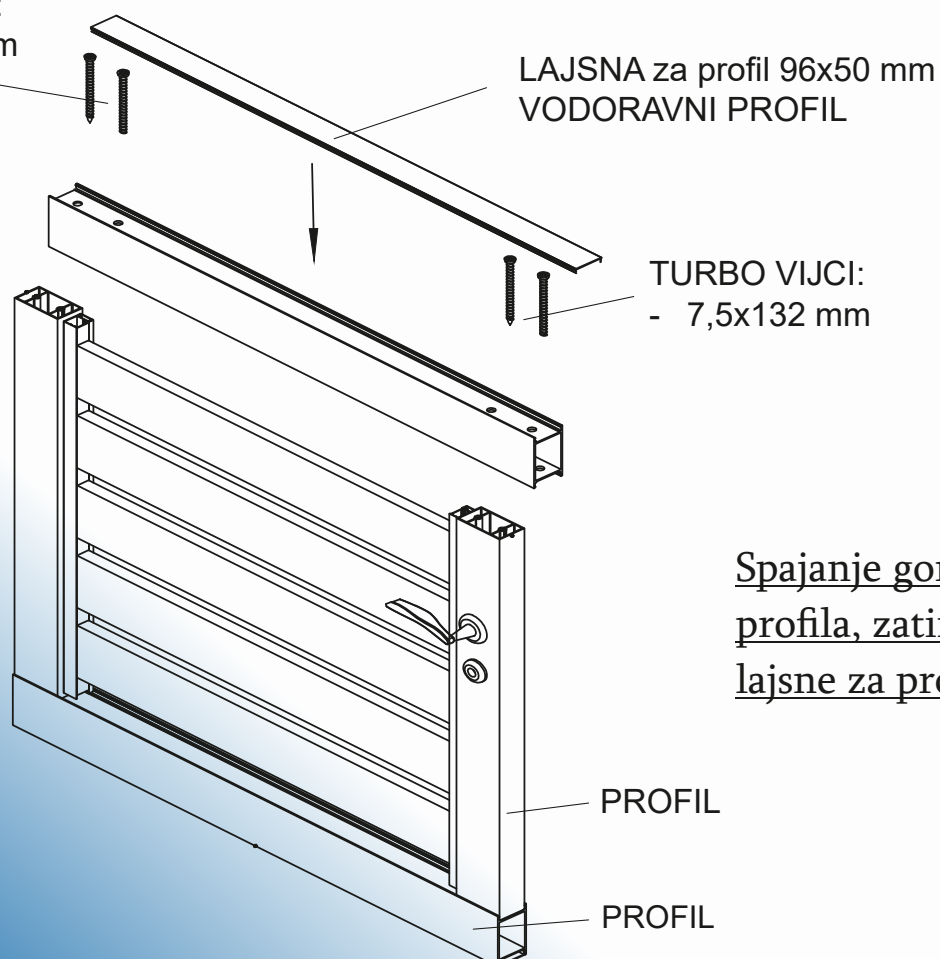


5.

Spajanje gornjih vodoravnih
profila, zatim stavljanje
lajsne za profil 96x50

6.


Završni dio,
postavljanje čepova
na vodoravne profile 96x50

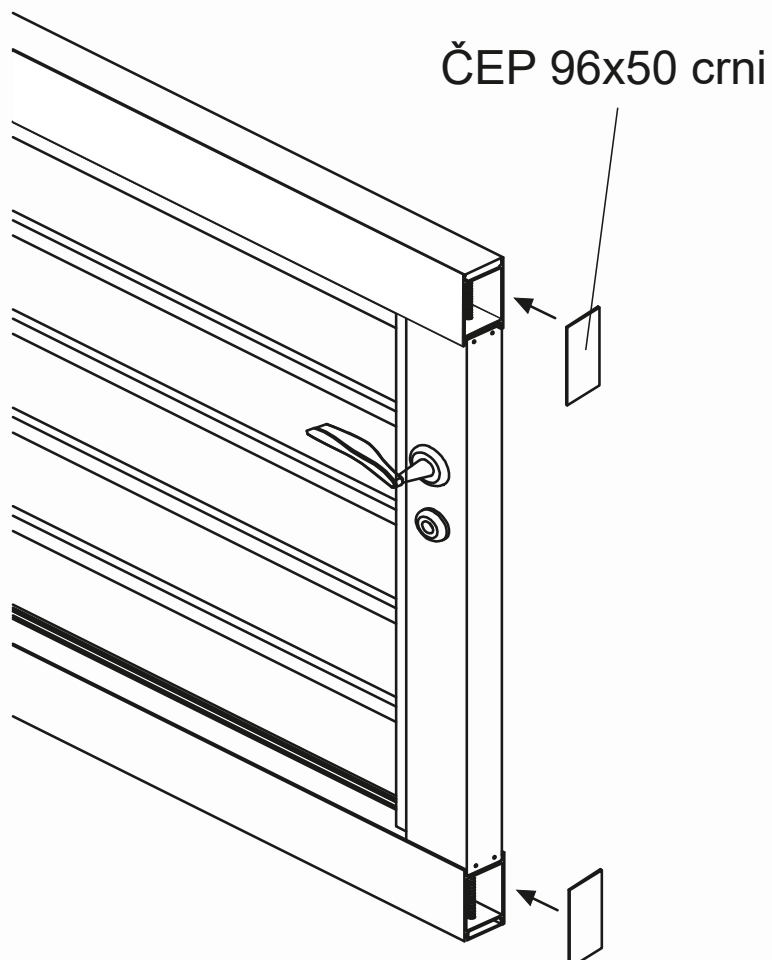

IZRADA KLIZNIH VRATA



1.

Spajanje vodoravnih 96x50 sa
okomitim 70x44 profilima,
zatim spajanje Lajsni eleg. za 20 mm
na okomite profile

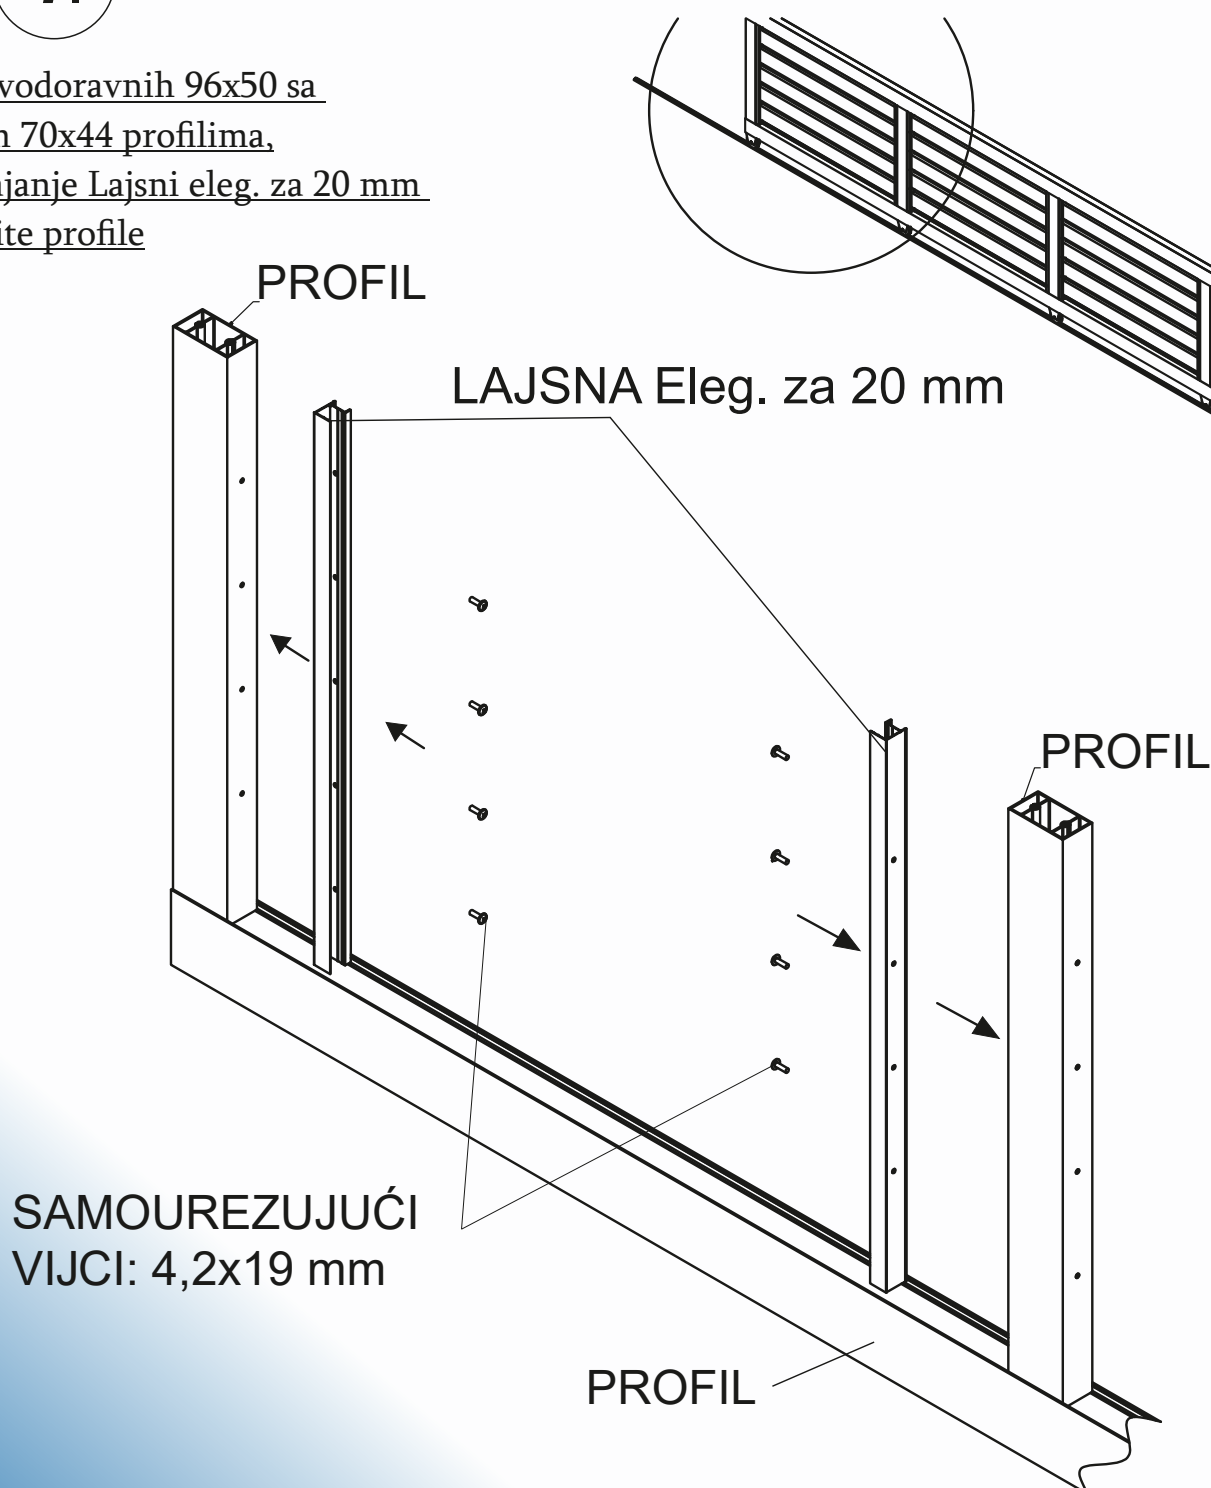

2.

Montiranje ispuna po želji
u lajsne 20mm

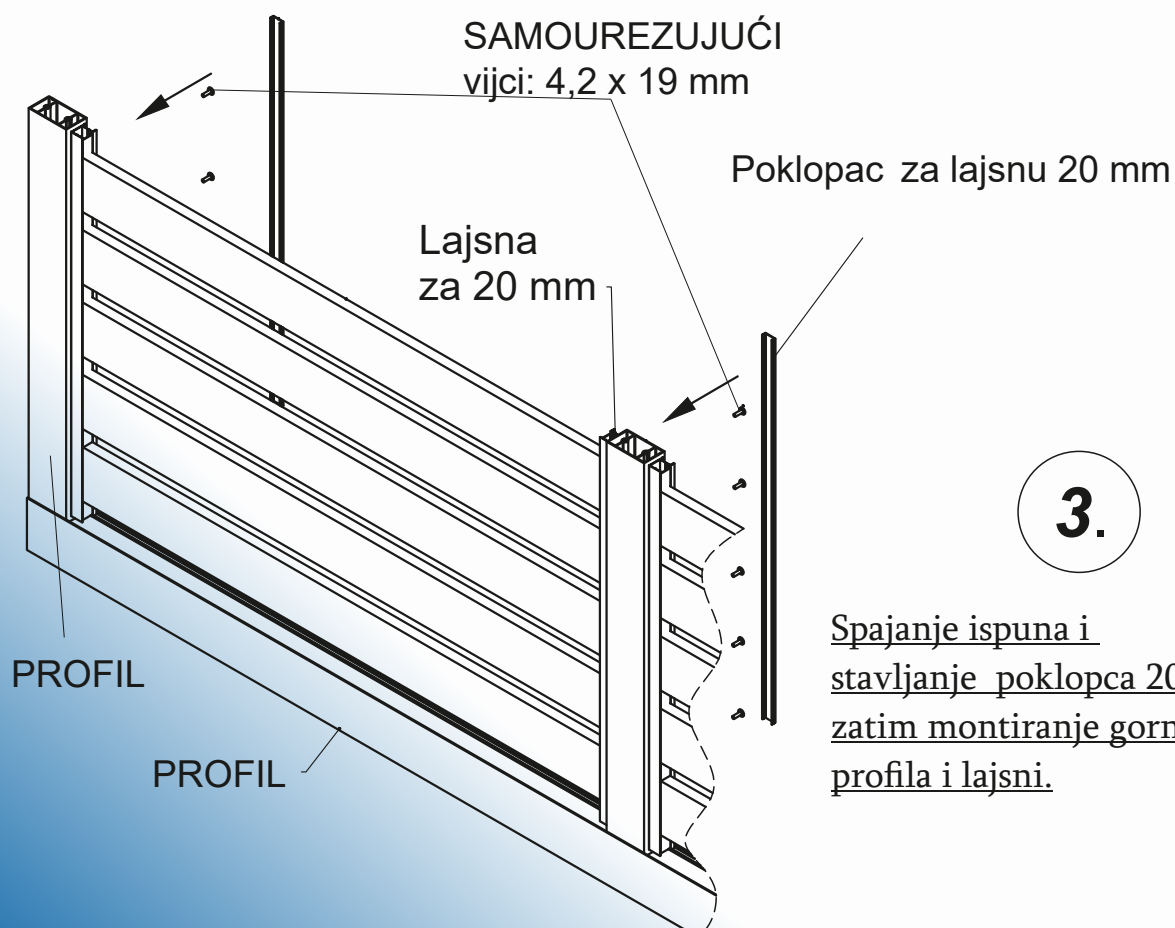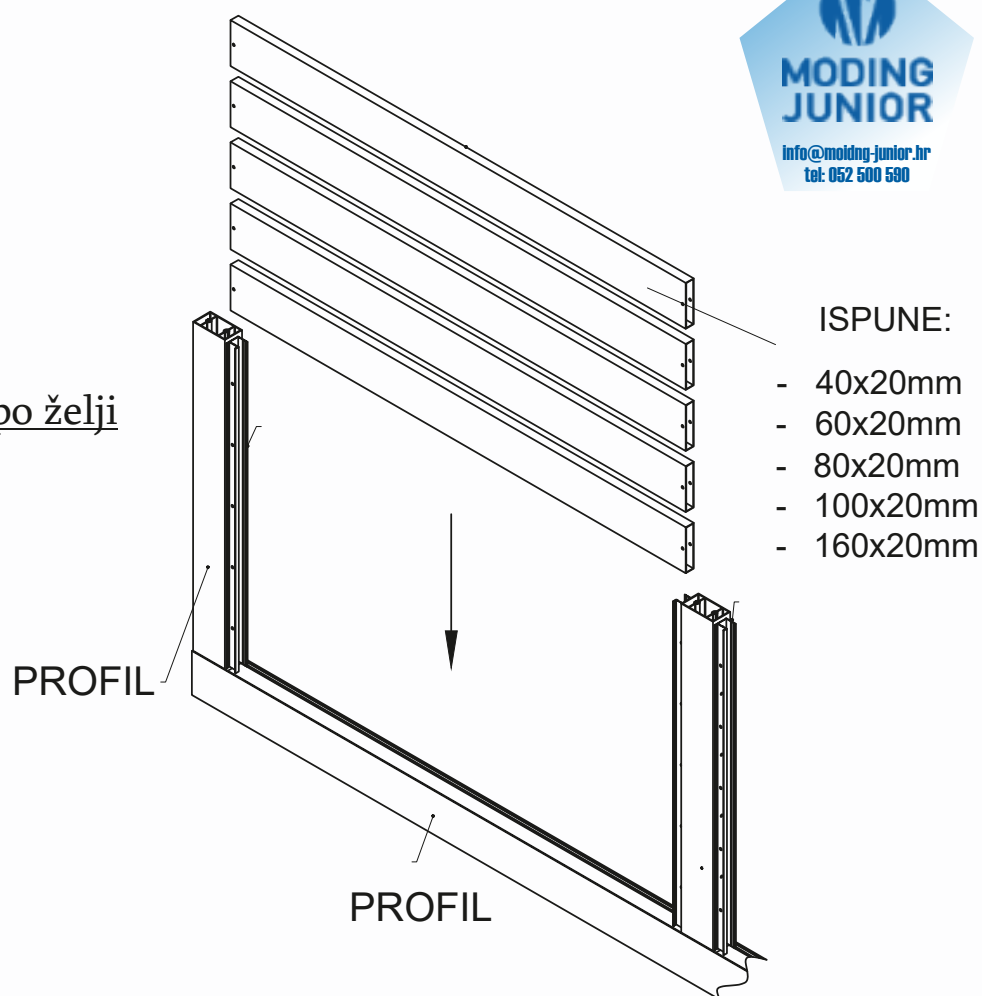


3.

Spajanje ispuna i
stavljanje poklopca 20 mm,
zatim montiranje gornjih vodoravnih
profila i lajsni.

4.

Završni dio, spajanje kotača po želji,
na donje vodoravne profile 96x50 mm

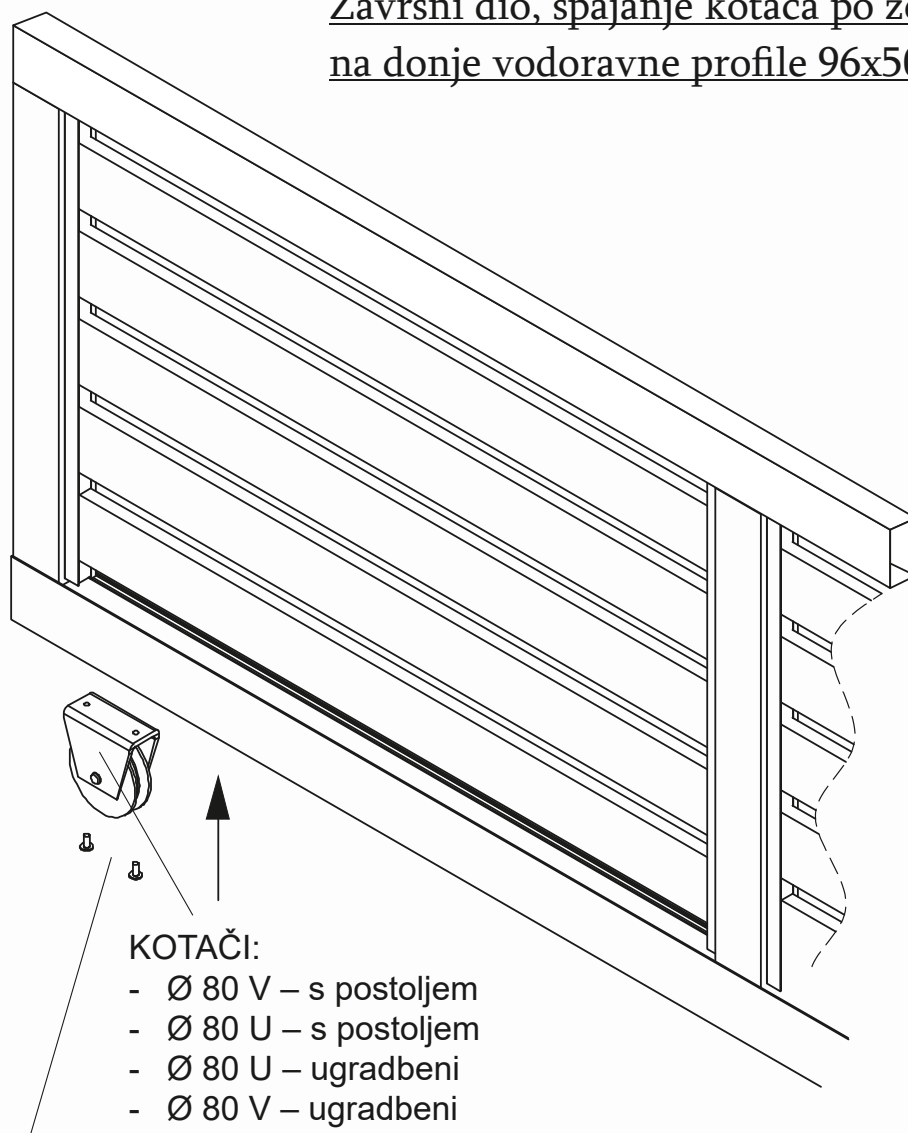

- KOTAČI:**
- Ø 80 V – s postoljem
 - Ø 80 U – s postoljem
 - Ø 80 U – ugradbeni
 - Ø 80 V – ugradbeni

**SAMOUREZUJUĆI
VIJCI: 6,3x30 mm**